

VIDEOCON V1602

User Manual



Contents

Legal Information	1
Section 1: Introduction	2
Important Safety Precautions	2
Section 2: Getting Started	4
Inside the Box.....	4
Installing and Removing the Battery	4
Inserting and Removing SIM Card	5
Inserting the Memory Card	5
Charging the Device.....	6
Section 3: Know your device	7
Phone Layout	7
Screen Icons	9
Section 4: Basic Operations.....	11
Make a Call	11
Making a Call Using Call history	11
Answering a Call	11
Section 5: Using the Phone.....	12
Managing the Phonebook	12
Phonebook Settings	12
Viewing Call history.....	13
User Profiles	14

Multimedia.....	14
Camera.....	14
Video recorder.....	14
Video player	15
Audio player	15
Image Viewer.....	15
FM radio	16
Messages	16
Text message	16
MMS.....	17
Games	17
Staying Organized.....	17
Services.....	18
SIM applicator / STK.....	18
WAP.....	18
Data account	19
Section 6: Settings.....	20
Setting Date/Time.....	20
Power on/off	20
Securing your phone	20
SIM1/2 PIN code.....	20
Phone lock.....	20
SIM lock	20

Auto keypad lock	21
Mobile Tracker.....	21
Long distance control.....	21

Legal Information

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited.

VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as it is". Except as required by applicable law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

Section 1: Introduction

Important Safety Precautions

Please comply with these precautions / measures to avoid dangerous or illegal situation and ensure peak performance of your phone.

Road safety

The use of a mobile phone while driving is illegal and should be avoided at all costs. If you need to make or receive an urgent call, move your vehicle to the side of the road and allow it to come to a complete stop before using your phone.

Switch off in potentially hazardous environments

Switch your phone off while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.

Switch your phone off when entering any explosive area. Observe any provided guidelines or regulations.

Emergency Calls

In case of an accident or an emergency, dial 100 (Police), 101 (Fire) or 102 (Ambulance) from your phone. Being emergency numbers, these are toll free and can be reached even from areas where the network signal strength is very poor.

Battery Use

First time charging must be done using the regular charger and not using the USB cable.

During the first 3-4 charge sessions, charge the battery until it has been fully charged according to the battery level indicator. This ensures higher battery backup and extends the battery life.

Avoid partial charging. Wait for the battery to discharge completely before charging it again.

Charging through the USB Cable should be reserved during an emergency.

Special Regulation: Follow any special regulations in force in any area and always switch off your device whenever it is forbidden to use it, or when it may cause interference to the surrounding.

Radio Interference: All mobile phones cause radio interference within the specified Limits of GSM standards.

Qualified service: Only qualified service personnel must repair the equipment. Use only approved accessories and batteries.

Emergency calls: Ensure that the phone is switched on and in service. Enter the emergency number (102 or another official emergency number) and press the "Dial" key.

Use only approved accessories: The use of any other power accessory will violate warranty conditions that apply to the phone.

Section 2: Getting Started

Inside the Box

The standard packing contents are as follows:

- Base Trans-receiver
- Battery
- Charger
- Hands free Kit
- User Manual
- Service Guide


Installing and Removing the Battery

To install the battery:

1. Locate the groove at the top of the phone, and pull the battery cover out to open.
2. Push the battery in the battery compartment in such a way that the connectors of the phone are aligned with the connectors on the battery.

To remove the battery:

1. Turn off the phone and unplug other external power sources.
2. Locate the groove at the top of the phone, and pull the battery cover out to open.
3. Pull out the battery from the battery compartment as shown in the image.

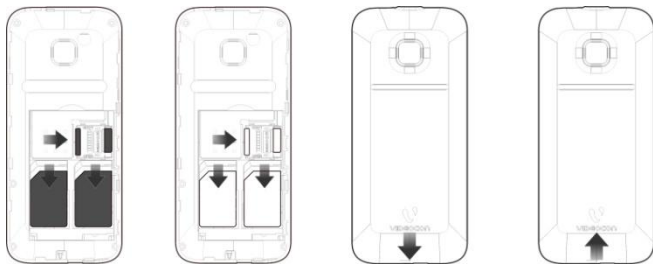

Inserting and Removing SIM Card

1. Remove the battery back cover and the battery.
2. Remove the battery from the battery compartment.
3. Slide the SIM card in the slots (with metal connectors) facing down as shown in the image.

Note: Please do not touch the metal area to avoid losing and breaking the information in SIM card. Avoid SIM from putting it nearby.

Inserting the Memory Card

1. Remove the battery back cover and the battery.
2. Unlock and lift the memory card cover.
3. Place the memory card with metal connectors facing down.
4. Lock the memory card cover.

Charging the Device


Insert the Plug of your charger to the charging port at the base of your phone.

When you begin to charge the battery, the stripe of Signal Strength on the right corner of the screen starts to roll. When battery gets fully charged, the stripe becomes stable and stops rolling.

Note: Using the phone while charging may extend the charging time.

Section 3: Know your device

Phone Layout

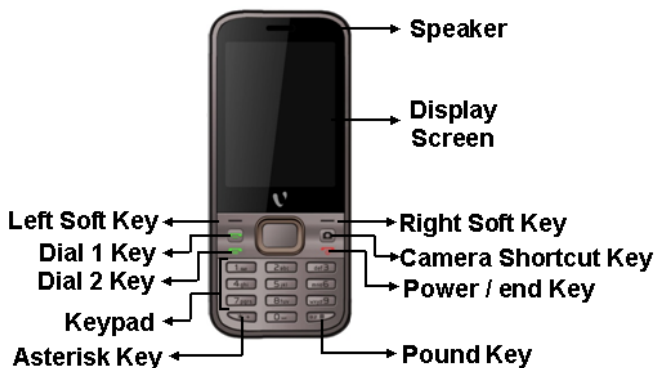

Left Soft Key

Use to perform functions that display in the lower left of the display.

Right Soft Key

Use to perform functions that display in the lower right of the display.

Dial Key

Receive or make calls, and while in idle mode, click to view call history.

End Key

End or reject calls; Press and hold this key to turn phone on/off; cancel function and return to the idle screen.

Up and Down Direction Keys

- Scroll to select options
- In the idle screen, use up and down direction keys to open shortcut applications.
- While creating a message, use up and down direction keys to select a word from the dictionary
- In function menu, scroll to open desired function.

Left and Right Direction Keys

- In the idle screen, press to open shortcut applications
- In edit message status, press to select the required word.

Camera Key

- In standby mode press to enter Camera function.
- Press to clear the numbers when input numbers to dial.
- In edit message status, press to clear the words.

0-9 Keys

In standby mode, press number keys to input dialing number. In standby mode, press and hold 1 key to enter Voicemail server, press and hold 2-9 key to directly call the number set before in the speed dial










list. In edit status, press to input numbers, characters and phonetic notation. In edit mode, except input number, press 0 key to input space. In functional menu, press numbers to speed select submenu items.

*** & # Key**

Functions vary in different situations or function menus: On Input Screen, press "*" for symbols. In standby and dial mode, press and hold "*" to input + for an international call. On Input Screen, press "#" to switch among different inputting methods. In standby mode, press and hold # key to switch between silent mode and previous mode. Press Left soft key and hold * key to lock/unlock the keypad.

Screen Icons

Indicator icons provide information such as battery level, network signal strength, current date & time and so forth.

	Network signal strength
	SIM1 inserted
	SIM2 inserted
	Battery Strength
	Phone is in ring mode
	Ring and Vibrate mode are active
	First ring then vibrate
	Alarm is active
	Headset connected

Note: Depending on your country or service provider, the icons shown on the display may vary.

Section 4: Basic Operations

Make a Call

To make a call, unlock the keypad, if locked, enter the desired phone number and press the Dial key.

Note: Your service provider programs one or more emergency phone numbers, such as 102, 100, that you can call under any circumstance, even when your phone is locked or the SIM card is not inserted. Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

Making a Call Using Call history

All dialed and incoming numbers are saved in call history and categorized into Missed calls, Dialed calls and Received calls. To check the history, please follow these steps:

In standby mode, press the Dial key to view All calls. Use the up/down direction keys to scroll among Missed calls, Dialed calls and Received calls.

Answering a Call

To receive an incoming call, press the Options key and select 'Answer' or receive it directly by pressing the Dial key.

If headset is available, user can choose headset key to answer the call.

Section 5: Using the Phone

Managing the Phonebook

The Phonebook is a location in your phone's internal memory on which you can store numbers of your contacts. The SIM card also allows you to store phone numbers, though the permissible limit may vary from provider to provider. Even though, the SIM card and the phone's internal memory are physically separate, they are used as a single entity known as the Phonebook on the phone.

Phonebook Settings

Press **Menu→Phonebook→ options → Phonebook Settings**. The available settings are:

- **Memory Status:** Enable to check out the memory status individually for both the SIM and phone respectively.
- **Preferred storage:** The memory type you want to use for storing contacts. The options available are SIM1, SIM2, and Phone.
- **Fields:** Enable to set the different fields which are to be entered during addition of a contact.
- **My vCard:** Store your personal contact information as a vCard to allow quick sharing of your details with contacts. Once you have entered your contact information, use the Send my vCard option to send your

vCard via SMS, MMS, or through file transfer over Bluetooth.

Viewing Call history

Use this menu to view the dialed, received or missed calls. On the Idle screen, press **Menu→ Call history**. The **Call History** sub-menu comprises the following:

- Missed Calls: List of the last 50 calls you were unable to answer.
- Dialed Calls: List of the last 50 numbers you have dialed.
- Received Calls: List of last 50 incoming calls.
- Delete call logs: Delete Missed calls, Dialed calls, Received calls and Delete all on the SIM card.
- Call timers: View Last call time, Dialed calls, Received calls and Reset all time of the SIM card.
- Call cost: View Last call cost and Total cost of the SIM card. You can also Reset cost and set the Maximum cost and the Price per unit of the SIM1 card. It requires network support.
- Text message counter: View and reset the numbers of short messages sent and received on the SIM card.
- GPRS counter: View the volume of GPRS last sent, last received, all sent and all received

on the SIM card. You can also reset the counter on the SIM card.

User Profiles

This menu allows you to set the ring tone, alert type, ring volume, answer mode and backlight, etc when you receive an incoming call or a new message so that you can adapt the use of your phone to different types of call environments. The available profiles are, General, Meeting, Outdoor, Indoor, Silent, Headset, and Bluetooth.

Multimedia

Camera

Your Videocon V1602 is equipped with a 2.0 Megapixel camera on the back of the device that can be used to take still photographs or record videos.

Select t **Menu → Multiedia → Camera** to launch the camera application.

Taking and Saving a Photo

Once the camera application is enabled, press the OK button to capture the image. All pictures that you chick are automatically saved to a **Photos** folder.

Video recorder

Select **Menu → Multiedia → Camera → Switch to Video recorder** to enable the video mode for the camera.

Recording Videos

Choose **Menu → Multimedia → Video recorder** to start the video recording. After setting the view, start to record a video by pressing the [OK] key. If you want to view the recorded file, you can access it via the Video player menu.

Video player

Use Video player to watch videos.

Audio player

Your phone provides you a friendly audio player device for entertainment purpose. You may enter the music player via main menu. You may also download the music content via USB or other connection. Music tracks must be saved in **Audio** folder in [**File manager**] in order to be automatically detected and added into the default play list. You may listen to the music through the headset or loudspeaker. The user-friendly interface is specially designed to allow easy access to common functions such as play, pause, and stop.

Playing Audio Tracks

In the Music Player menu, you may select List to access the following setting. If you are a first-time user, select Play List to add music tracks from your memory card. Your music player will automatically detect and add all the music tracks into the default play list.

Image Viewer

You can see your photos in your phone by choosing [**Image viewer**] menu in [**Multimedia**] menu. It will

display the photos with image name, image size and date.

FM radio

The FM radio application turns the mobile phone into a portable FM radio device. It primarily provides users the interface to a single-chip electronically turned FM stereo radio for listening to live-broadcast stations. You must connect the earphone to your phone as it works as an antenna.

To listen to the radio

Connect the earphone to your phone. When entering the main screen, a default frequency is selected and it's power off for the first time of entrance.

Messages

In Messaging, you can send and receive text and multimedia messages. To launch messaging, on the idle screen, select **Menu → Messages** to view the available functions. Message functions are available depending on network services that your service provider supports.

Text message

- Write message: Create and send a message.
- Inbox: Messages and data received using SMS or MMS are stored in the Inbox folder.
- Sentbox: Messages that have been sent are moved to the Sentbox folder.
- Drafts: Messages that you have been writing are stored in the Drafts folder.

MMS

Your phone also supports Multimedia Messaging Service (MMS). It enables you to send images, sound and text files. To send a multimedia message, you need to edit the following fields:

- To: Insert the main recipient number to whom you want to send the message.
- Cc: Enter carbon copy recipient.
- Bcc: Enter blind carbon copy recipient.
- Subject: Enter and edit subject.
- Content: Edit contents of the multimedia message.

Games

Select **Menu → Fun & Games**, to access the Games menu. Game interface offers option to select a game, user can select the following game from the interface

- Copter
- UFO

Staying Organized

Use this menu to keep track of your schedule. You can also use convenient features, such as Calendar, To do list, Alarm, World clock. To access this menu, press [**Menu**] in Idle mode and select [**Tools**]. The available options are:

- Calendar: You can keep track of your monthly schedule.

- To do list: You can use your phone to keep track of all your Date, Call and Anniversary.
- Alarm: Set the alarm to ring at a specific time.
- World clock: Set your local time zone and find out the current time in another part of the world.
- Calculator: Your phone comes with a built-in conversion application.
- EBook reader: With the function, you may read any file in TXT format saved in the memory card.
- Unit converter: Using Converter, you can perform Length, Weight, Volume, Surface, Temperature and Velocity.
- Currency converter: You can use your phone for converting currency. You have to select the amount and currency rate to convert.

Services

SIM applicator / STK

STK (SIM Tool Kit) is shown only if it is provided by your SIM card. For further details, please contact your network operator.

WAP

WAP function enables you to use the phone to surf the Internet

Data account

This function enables to set the account information.

Section 6: Settings

For more information on configuring phone settings, refer to the following chapter.

Setting Date/Time

This option enables you to set the time, time zone, time format, date and the date format.

Power on/off

This option enables you to set the auto power on/off and the auto power on/off status.

Securing your phone

SIM1/2 PIN code

This option enables you to set a Personal Identification Number (PIN) for your phone that is required each time you switch on your phone. You can also change your PIN from this option.

Phone lock

This option enables you to set a lock for your phone that is required each time you change the SIM card of the phone.

SIM lock

This option enables you to set a lock for your SIM card that is required each time you switch on your phone.

Auto keypad lock

This option enables you to set the auto lock time for the keypad.

Mobile Tracker

This function enables you to track your phone in case it gets lost. The default password for the mobile tracker is "0000". If someone inserts another SIM card in your mobile, you will receive an SMS to the assigned number from the new SIM card to know who is using your mobile

Long distance control

Remote Control Commands

If you set the remote control password as 0000, the commands for the remote control functions will be as follows.

Function	Command
Power off phone	YCKZML0000POWEROFF
Phone lock	YCKZML0000LOCK
Call divert to a particular number (e.g. divert all incoming calls of the illegal user to the particular number)	YCKZML0000CALLDIVERTTO1234567890

1234567890)	
SMS divert to a particular number (e.g. divert all incoming messages of the illegal user to the particular number 1234567890)	YCKZML0000NEWMESSAGESDIVER TTO1234567890
Fetch Phonebook.	YCKZML0000ALLNUMBERSDIVER TO1234567890
Fetch SMS.	YCKZML0000ALLMESSAGESDIVER TTO1234567890
Fetch one contact NAME . (e.g. for copying one particular contact NAME from the lost phone)	YCKZML0000CONTACT NAME DIVE RTTO1234567890
Format	YCKZML0000FORMAT
Cancel Call divert	YCKZML0000CANCELDIVERTING
Cancel SMS divert	YCKZML0000CANCELDIVERTINGNE WMESSAGES

Note: 1234567890 is the number to which the call or messages that you want to divert.